

ALPHADRIVE 6

Installation Instructions

(Translation of the original installation instructions)

Foreword

Disclaimer and exclusion of liability

DewertOkin is not responsible for damage resulting from:

- failure to observe these instructions,
- changes made to this product which have not been approved by DewertOkin, or
- the use of replacement parts which have not been approved or manufactured by DewertOkin.

- ▶ We reserve the right to make unannounced technical changes in the course of our continual product improvement process!

Creation of a complete operating instruction manual for the entire end product

These instructions are only intended to be used by the end-product manufacturer. They should not be given to the operator of the end product. The factual information contained within may be used as a basis when creating the end-product manual.

The warning and danger notices are best suited for use in the end product's manual. However it is not sufficient to simply follow these notices. You should also carry out an internal risk assessment for your end product. This can then be used as the basis for the safety notices in your manual.

These installation instructions do not contain all information required to safely operate the end product. They only describe the installation and operation of the drive as partially completed machinery.

The instructions are intended for the technicians responsible for manufacturing an end product and not for the operators of the end product.

Notice for customers in EU nations

German Inspection Authority (TÜV SÜD Product Service) testing label

The construction of the ALPHADRIVE 6 drive has been inspected by the German TÜV SÜD Product Service Inspection Authority. TÜV SÜD Product Service also monitors the production of the ALPHADRIVE 6. The official German TÜV SÜD Product Service certifies this construction inspection and production monitoring.



Figure 1 TÜV SÜD Product Service Safety Mark

Table of contents

Foreword	3
Disclaimer and exclusion of liability	3
Creation of a complete operating instruction manual for the entire end product	3
Notice for customers in EU nations	3
Table of contents	4
1. General Information	5
1.1 Configurations	5
1.2 About these installation instructions	5
1.3 Safety notices within the installation instruction and the operating instructions for the entire machine	5
1.4 Conventions used	6
2. Safety notices	7
2.1 Proper and intended usage	7
2.2 Selection and qualification of personnel	7
2.3 Ratings plate	8
3. Description	9
3.1 Components	9
4. Technical specifications	13
5. Installation	15
5.1 Safety notices to observe during installation	15
5.2 Installation procedure	16
6. Notes on operation	19
7. Maintenance and cleaning	20
7.1 Maintenance	20
7.2 Cleaning	20
8. Disposal	21
8.1 Packaging material	21
8.2 Drive components	21
Declaration of incorporation/installation	22
EU Declaration of Conformity	23
Additional information	24

1. General Information

1.1 Configurations

The ALPHADRIVE 6 drive is run in several different configurations. The ALPHADRIVE 6 name, as used here, also includes the ALPHADRIVE 6 ADZ6, ALPHADRIVE 6 AD1-6 and ALPHADRIVE 6 AD2-6 configurations.

1.2 About these installation instructions

These installation instructions must be followed closely in order to install this drive successfully and safely in the end product. These instructions are not an operating manual for the end product.

These instructions will help you to minimize danger. They will also help you to increase the reliability and lifespan of the device.



CAUTION

The notices in these instructions must be followed! Following the guidelines during installation and connection procedures will help to minimize:

- the risk of accident and injury, and
- damage to the drive system or the end product.

These installation instructions have been written with due care and attention. However, we cannot guarantee that the data, images and drawings are complete and correct nor do we accept any liability for the information contained therein, unless required by law.

Availability of this document

As manufacturer of the end product, you are obligated to comply with Machinery Directive 2006/42/EC. This directive stipulates that the installation instructions must be kept on file for governmental inspection purposes.

1.3 Safety notices within the installation instruction and the operating instructions for the entire machine

The manufacturer of the end product is only permitted to operate the ALPHADRIVE 6 drive (by itself an incomplete machine)

- when the end product (for which the ALPHADRIVE 6 drive is intended) is in compliance with all protective measures specified in the Machinery Directive 2006/42/EC, and
- when the manufacturer expressly declares the compliance of the end product.

The manufacturer of the end product must create a manual for the users of that product. The safety notices in the end-product manual must be written based on the end product's risk assessment.

1.4 Conventions used

Notices which do not relate to safety are indicated in these instructions with a triangle:

- ▶ Triangular notice symbol

Safety notice explanations



CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices which are not related to personal injury but may result in damage to the product or surroundings.

2. Safety notices

2.1 Proper and intended usage

The ALPHADRIVE 6 drive is meant to be installed in an end product.

- It provides motor adjustment capabilities for movable parts. It should be used in conjunction with suitable fitting brackets and mechanics.
- It can be used for such applications as beds, chairs, and tables.



CAUTION

Risk of accident

This drive should only be used for the applications described above. Any other use is forbidden. Improper usage can lead to accidents or destruction of the unit. Such non-approved applications will lead immediately to the expiration of all guarantee and warranty claims on the part of the end-product manufacturer against the manufacturer.

Improper usage

Be sure to follow the notices below concerning improper usage. You should include them in your product manual in order to inform the users of your end product.

The ALPHADRIVE 6 drive should not be used:

- in any environment where combustible or explosive gases or vapours (e.g., anaesthesiology) may be present,
- with pulling or pushing forces that exceed those specified on the ratings plate,
- in any application that will be cleaned with an automated washing system,
- in a moist environment,
- outdoors.

The ALPHADRIVE drive can be used by children of 8 years and older, persons with reduced physical, sensory or mental capabilities, or persons with lack of experience or knowledge when they are supervised or instructed concerning the safe use of the device and when they understand the resulting risks. Do not allow children to play with this device. The cleaning and user maintenance must not be carried out by children without supervision.

- ▶ You should only use spare parts which have been manufactured or approved by DewertOkin. Only these parts will guarantee a sufficient level of safety.

2.2 Selection and qualification of personnel

The installation of the drive in the end product may only be performed by qualified personnel. You should only install this drive when you are qualified to do so. Otherwise, a properly qualified person should be found for this task.

2.3 Ratings plate

- ▶ The ratings plate shown is an example; the specifications for your drive may differ from this illustration.

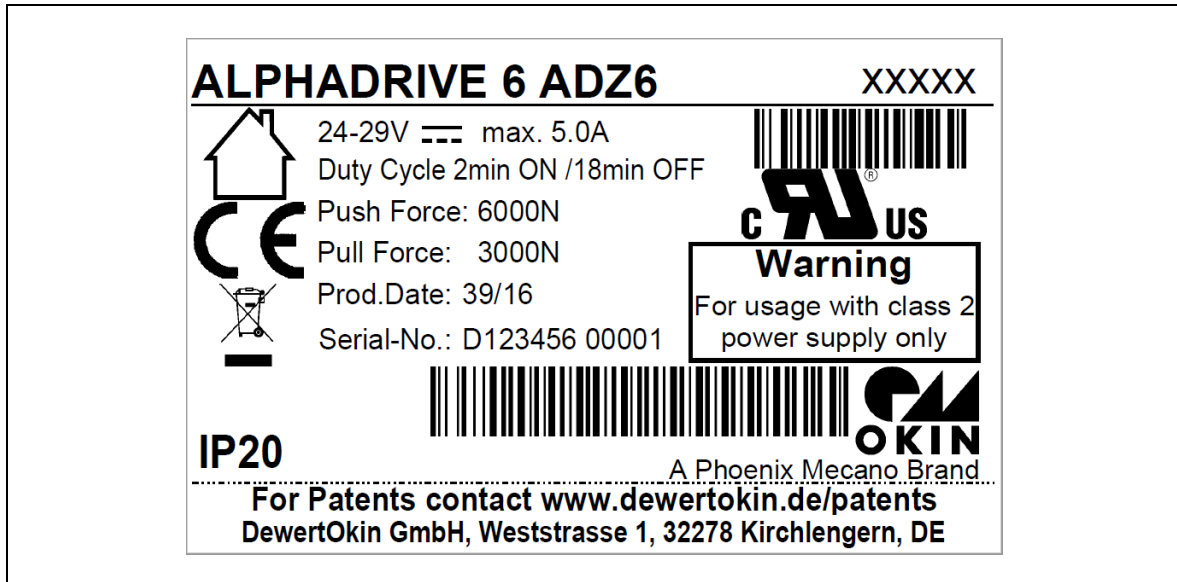


Figure 2 Ratings plate example

Legend for the ratings plate

ALPHADRIVE 6 ADZ6	Model name
XXXXXX	Article number
24 – 29V	Input voltage
Max. 5.00A	Current consumption
Duty cycle: 2 min ON / 18 min OFF	Intermittent operations: 2 minutes on / 18 minutes pause
max. Push Force	Push force
max. Pull Force	Pull force
Prod.date	Calendar week / year
Serial No.	Serial number for your drive
IP20	Protection degree
	Use in dry rooms only!
	Follow all special disposal instructions!
	Mark of CE conformity

3. Description

The ALPHADRIVE 6 drive is an electrically driven motor that is responsible for moving the end product in a linear direction. This adjustment is created by the in and out movement of a stroke pipe. The ALPHADRIVE 6 drive is controlled using an Okin handset.

The technical specifications for the variants are listed in Chapter 4 "Technical specifications". The variants differ according to their:

- Working performance,
- Speed,
- Pushing and pulling forces,
- Dimensions and stroke,
- Clevises (gear)
- Mount for the stroke pipe (refer to section 3.1.2),
- Connection variants (refer to section 3.1.3).

3.1 Components

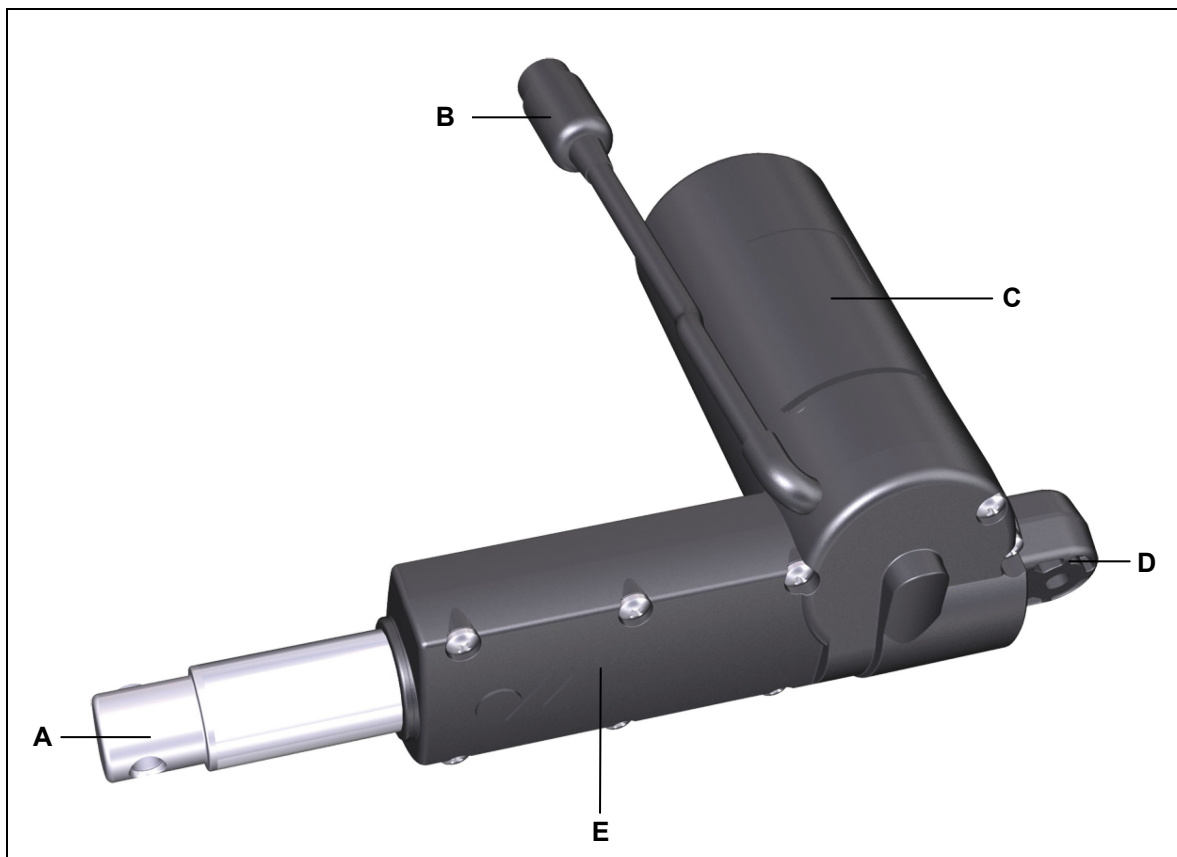


Figure 3 Main components of the drive ALPHADRIVE 6

A Head of stroke pipe

B Electrical connection

C motor

D Gear clevis

E Guidance profile

3.1.1 Gear clevis variants

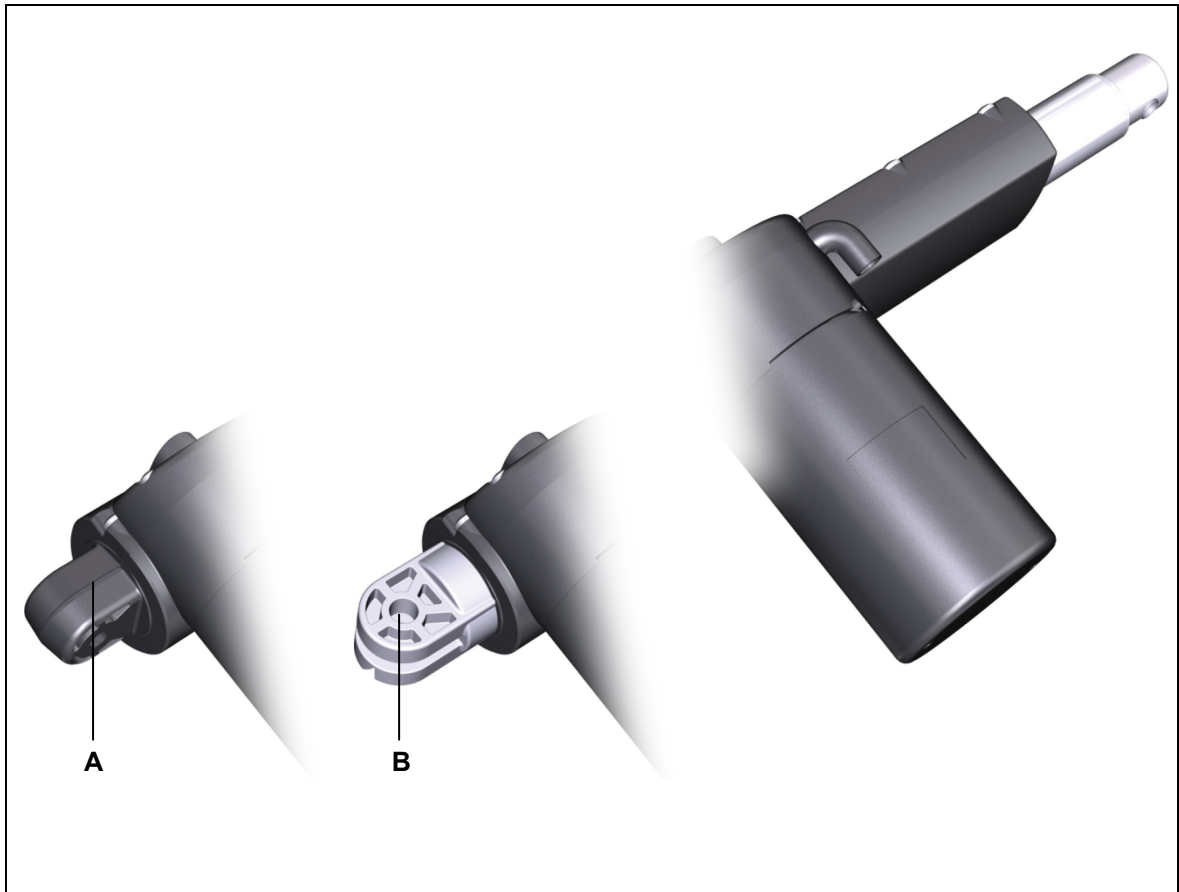


Figure 4 Variants of the gear clevis on the ALPHADRIVE 6 drive

A Standard clevis

B Clevis with slot / with hole

3.1.2 Attachment of the stroke pipe

There are two types of stroke pipes available for different types of applications. The stroke pipe can be screwed onto the spindle screw or it can be mounted unattached. The drive only exerts pushing force when the stroke pipe is mounted loosely (unattached). The motions of the drives for these two versions are shown in the following illustrations.

- ▶ If the stroke pipe is unattached, then the end product can be designed to prevent the stroke pipe from coming out during operations. This can be accomplished by implementing a fixed end-stop mechanism (refer to the "Safety notices to observe during installation" in the "Installation" chapter).

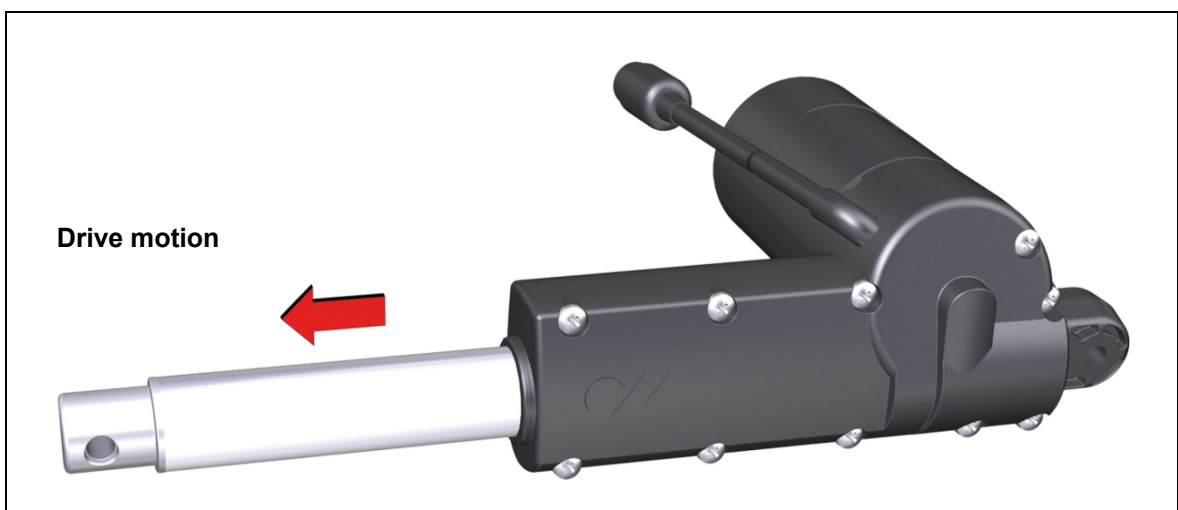


Figure 5 Loose fastening nut (stroke pipe not secured): only pushing forces

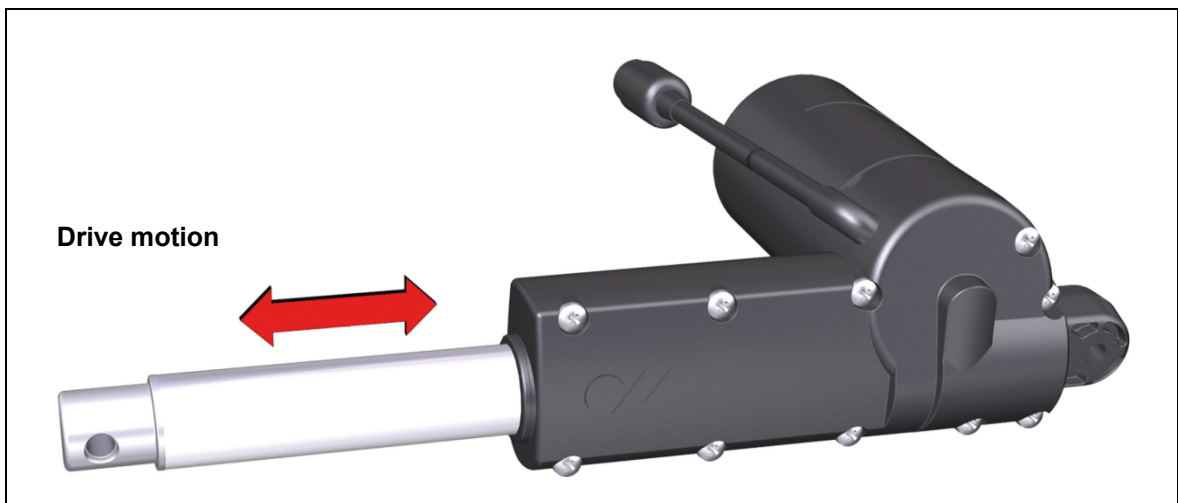


Figure 6 Stroke pipe screwed onto the spindle screw (attached): both pushing and pulling forces

3.1.3 Connection options

There are different power supply options for the ALPHADRIVE 6 drive:

- LS plug,
- 5-pin plug,
- 3-pin plug,
- Motor controller cable.

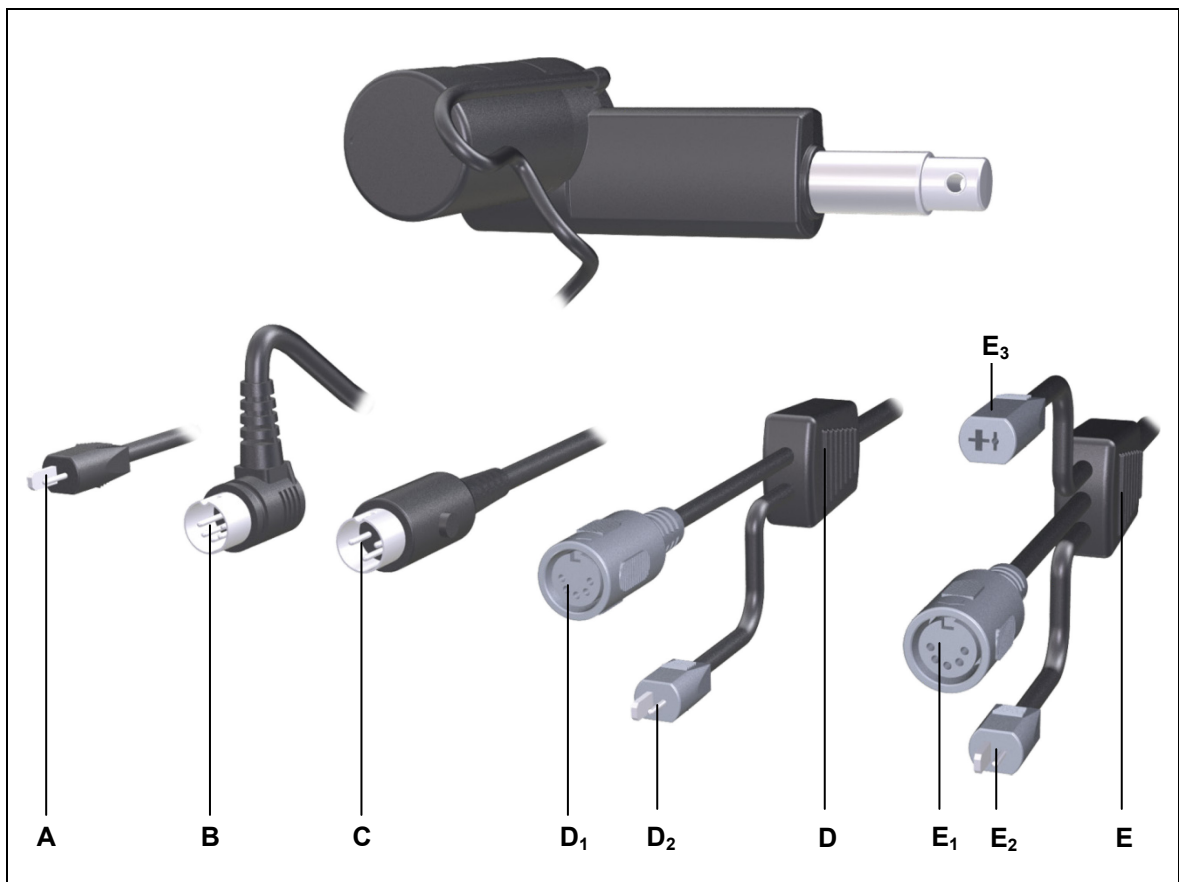


Figure 7 The connector plug and cable versions for the different ALPHADRIVE 6 drive types

A LS plug for the ALPHADRIVE 6 ADZ6

C 3-pin plug for the ALPHADRIVE 6 ADZ6

B 5-pin plug for the ALPHADRIVE 6 ADZ6

D Motor control cable for the ALPHADRIVE 6 AD1-6

D₁ Handset connection

D₂ Power supply connection

E Motor control cable for the ALPHADRIVE 6 AD2-6

E₁ Handset connection

E₂ Power supply connection / power supply

E₃ Connection for an additional slave drive

4. Technical specifications

Input voltage	24 V DC – 29 V DC
Current consumption at rated load	Max. 5.0 A, depending on version (refer to the ratings plate on the drive)
Permitted push force	Max. 6000 N, depending on version (refer to the ratings plate on the drive)
Permitted pull force	Max. 3000 N, depending on version (refer to the ratings plate on the drive)
Mode of operation ¹ under max. rated load.	Intermittent duty 2 min./18 min.
Protection class	III
Noise level	≤ 65 dB(A)
Drive type	Single drive
Load type	Push / pull
Adjustment speed ²	Up to 30 mm/second, depending on the version
Protection degree	IP20
Stroke	< 350 mm
colour	Black
Dimensions and weight	
Length x width x height	Min. 131 mm x 130 mm x 72 mm
Weight	Approx. 1.5 kg, depending on version
Ambient conditions for operation, storage and transport	
Transport / storage temperature	From -20 °C to +50 °C From -4 °F to +122 °F
Operating temperature	From +10 °C to +40 °C From +50 °F to +104 °F
Relative humidity	From 30% to 75%
Air pressure	From 800 hPa to 1060 hPa
Height	< 2000 m

¹⁾ Mode of operation: intermittent duty 2 min./18 min. This means that after the unit is operated with its rated load for up to two minutes it must then be paused for 18 minutes. The system can malfunction if this pause is not observed!

²⁾ Adjustment speed: the speed at which the clevis can move under no load (the speed varies depending on the load).

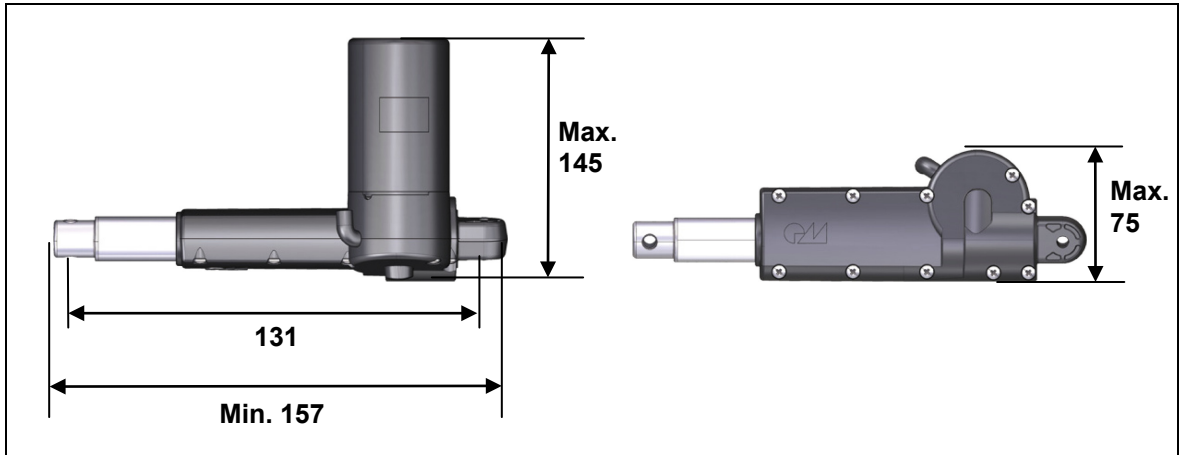


Figure 8 Dimensions of the ALPHADRIVE 6 drive, stroke pipe with hole (in mm), minimum installation dimension: 131 mm

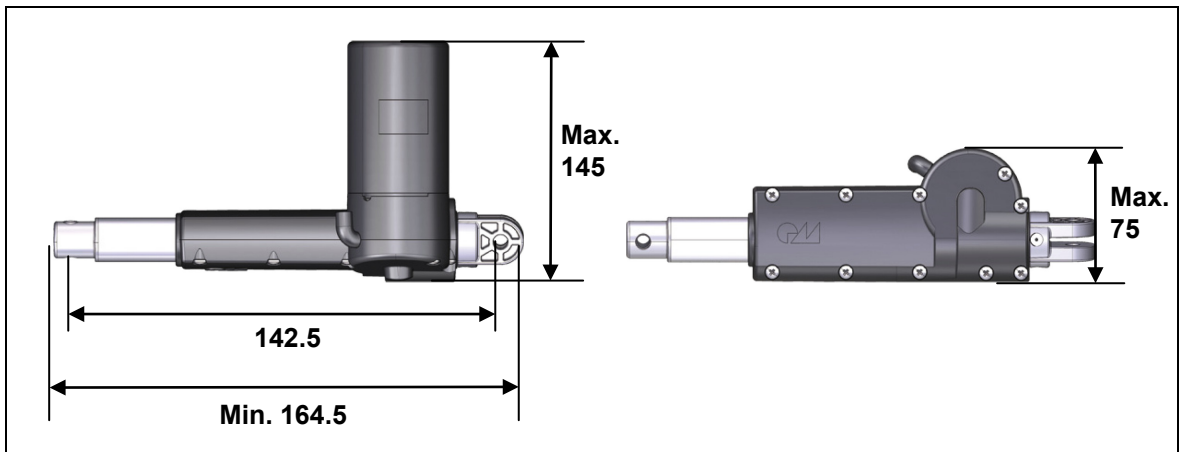


Figure 9 Dimensions of the ALPHADRIVE 6 drive, stroke pipe with hole (in mm), minimum installation dimension: 142.5 mm

5. Installation

5.1 Safety notices to observe during installation

Basic safety rules must be followed in order to ensure that the end product can be continually operated in a safe manner. The following rules must be observed while using the end product and while installing the drive.

Avoiding fatigue fractures

- Install the drive in the end product so that it is properly aligned. This will help prevent shear stress.
- Do not position the drive at a slanted angle when installing it in the end product. A slanted angle between the intended direction of movement of the end product and the drive's direction will create shear stress and could lead to a fatigue fracture.
- Be sure to install the drive so that it can always move freely in all operative states.
- You should never screw the stroke pipe into the drive.

Avoiding an overrun of the stop point with the end product

- ▶ Your end product should contain mechanical end stops. These will limit the drive movement and significantly increase operational safety. DewertOkin recommends that you build such mechanical end stops into your end product.

Make sure that your operating instructions inform the user of these safety points.

5.2 Installation procedure

- ▶ The fitted mounts on the end product should have elongated slots so that the installed position can be adjusted.

5.2.1 An installation example

Stroke pipe clevis / Stroke pipe head

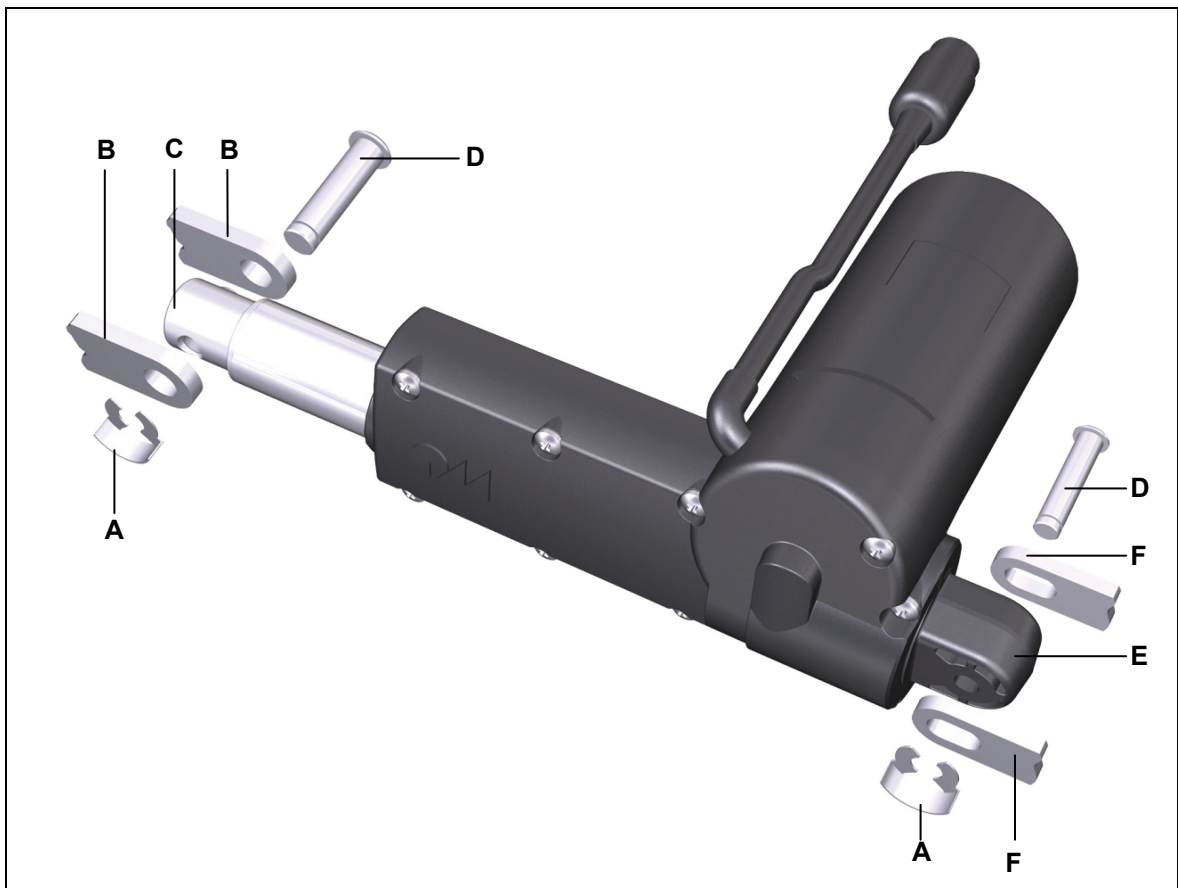


Figure 10 Installing the drive (example)

- | | |
|---|---|
| <p>A Safety clip</p> <p>C Head of stroke pipe</p> <p>E Gear clevis</p> | <p>B Bracket for securing the drive (on the stroke pipe side)</p> <p>D Mounting bolt</p> <p>F Bracket for securing the drive (on the motor side)</p> |
|---|---|

In the following example, installation of the ALPHADRIVE 6 drive into the end product is shown using the mounting bolt.

► Certain details may change because of technical changes.

- 1 Push the drive's gear clevis (E) onto the bracket (F).
- 2 Insert the mounting bolt (D) into the bracket (F).
- 3 Secure the mounting bolt (D) with the safety clip (A).

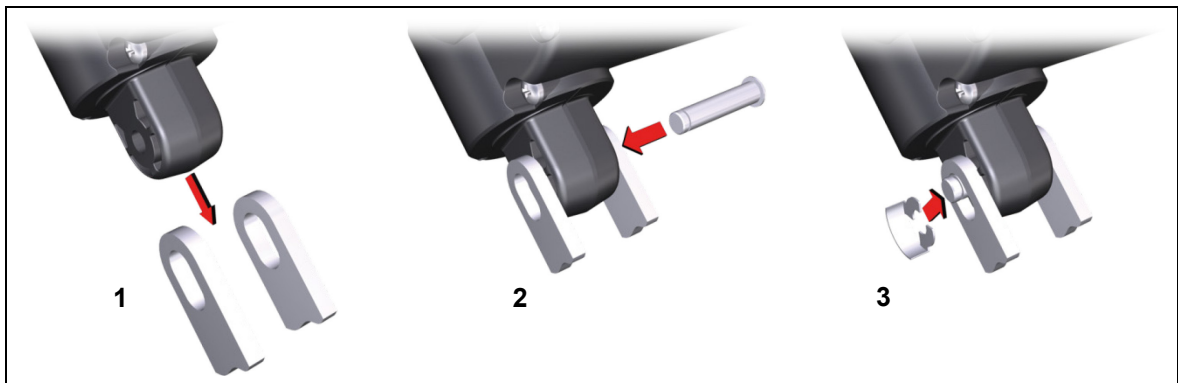


Figure 11 Steps for installing the gear clevis (example)

NOTICE

You should never screw the stroke pipe into the drive. A stroke pipe that has been screwed into the drive can result in fatigue fractures.

- 4 If the stroke pipe clevis (C) does not align exactly with the gear clevis (E), the stroke pipe may be unscrewed out of the drive by no more than a half turn.

NOTICE

The stroke pipe may only be turned one half rotation out of the drive. Do not rotate the stroke pipe further out. An over-rotation can lead to unsafe operations.

- 5 Attach the stroke pipe (C) using a mounting bolt (D) to the fitting (B).
- 6 Secure the mounting bolt (D) with the safety clip (A).
- 7 You may now connect the drive's electrical connection (refer to section 5.2.2).

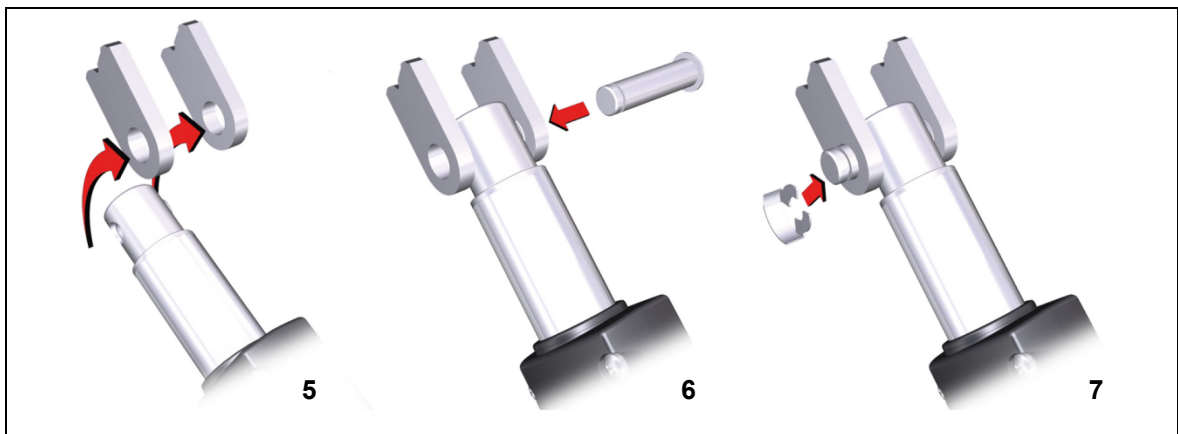


Figure 12 Steps for installing the stroke pipe (example)

5.2.2 Electrical connection



CAUTION

Danger of pinching/crushing injuries!

The electrical components may be connected or disconnected only when the mains power and the battery plug (when present) are disconnected. This ensures that uncontrolled movements cannot be triggered.

- ▶ If the hand switch will be used to control two drives, you must first connect both drives electrically to each other (for example, over a control unit or double drive). Then you can connect the handset.

Routing the electrical cables

When routing the cables, be sure that:

- the cables cannot get jammed,
- no mechanical load (such as pulling, pushing or bending) will be put on the cables,
- or
- the cables cannot be damaged in any way.

Fasten all cables (especially the mains cable) to the end product using sufficient strain relief and kink prevention methods. Be sure that the design of the end product prevents the mains cable from coming into contact with the floor during transport.

5.2.3 Dismantling



CAUTION

Danger of pinching/crushing injuries!

- The electrical components may be connected or disconnected only when the mains power and the battery plug (when present) are disconnected. This ensures that uncontrolled movements cannot be triggered.
- Be sure to carry out work on the drive in a position so that no loads are bearing on it. Only in this way can you be sure to avoid any risks of crushing or injury.

- 1 Move your product into a position where it is supporting no load.
- 2 If multiple drives are connected electrically, they should be disconnected from each other.
- 3 Remove the security clips and the mounting bolt.

6. Notes on operation

These installation instructions do not contain all information required for the safe operation of the end product. They only describe the installation and operation of the drive as components (as defined in the Machinery Directive as a "partially assembled piece of machinery").

Power-on time / intermittent operations

NOTICE

The ALPHADRIVE 6 drive has been designed for intermittent operations. Intermittent operation is an operational mode where the drive must pause after a specified maximum period of operation (power-on time). The drive can overheat when these pauses are not maintained.

The ALPHADRIVE 6 drive must operate with an intermittent duty of 2 min./18 min. This means that after the unit is operated with its rated load for up to two minutes it must then be paused for 18 minutes.

Shutting off the drive

In order to shut off the drive, unplug the mains power plug and the battery plug (when present)! The power plug must always be accessible during operations so that emergency shut-off is possible.

Avoiding cable damage

Be sure that your operating instructions inform the user about the possible cable risks.

NOTICE

The cables (in particular the electrical connection for the drive and the power supply cable for the drive system) must not be squashed or crushed. In order to prevent damage to the drive, no mechanical strain should be placed on the cables.

7. Maintenance and cleaning

7.1 Maintenance

- ▶ The ALPHADRIVE 6 drive does not require maintenance.

7.2 Cleaning

- ▶ Clean the ALPHADRIVE 6 drive as needed using a dry cloth.

NOTICE

- Always disconnect the mains power plug from the drive system (and the battery plug if present) before you start to clean the unit!
- Never clean the drive in an automated washing system or with a high-pressure cleaner. Do not allow fluids to penetrate the drive. Damage to the system could result.
- Do not use a cleanser that contains benzene, alcohol or similar solvents.
- Make sure that you do not damage the drive's connecting cable.

8. Disposal

8.1 Packaging material

The packaging material should be sorted into recyclable components and then disposed of in accordance with the appropriate national environmental regulations (in Germany according to the recycling law KrWG from 01.06.2012; internationally according to the EU Directive 2008/98/EC (Waste Framework Directive WFD as of 12.12.2008)).

8.2 Drive components

The ALPHADRIVE 6 drive consists of electronic components, cables and metal and plastic parts. You should observe all corresponding national and regional environmental regulations when disposing of the ALPHADRIVE 6 drive.

The disposal of the product is regulated in Germany by Elektro-G, internationally by the EU Directive 2011/65/EC (RoHS), or by any applicable national laws and regulations. (The product is not regulated by the EU Directive 2012/19/EC (WEEE).)



The ALPHADRIVE 6 drive should not be disposed of with normal household waste!

Declaration of Incorporation/Installation

According to Appendix II of the EU Machinery Directive 2006/42/EC

The manufacturer:

DewertOkin GmbH

Weststraße 1

32278 Kirchlengern

Germany

declares that the incomplete machines described below

ALPHADRIVE 6 ADZ6

ALPHADRIVE 6 AD1-6

ALPHADRIVE 6 AD2-6

complies with the following basic requirements of the Machinery Directive (2006/42/EC):

Sections: 1.1.3; 1.3.3; 1.3.4; 1.3.7; 1.5.1; 1.5.2; 1.5.5; 1.5.6; 1.5.7; 1.5.8;
1.5.9; 1.5.10; 1.5.13; 1.6.3

You may only operate this incomplete machine after you have confirmed that the end product (into which this machine will be installed) complies with the Machinery Directive 2006/42/EC.

On request, the manufacturer is obliged to send the special documentation accompanying the partially completed machinery in electronic form to the appropriate national institution. The special technical documents corresponding to the machine have been created according to Appendix VII, part B.

The following person is responsible for the technical documentation: Silvio Wauro,
Address cited above.
Tel: 05223 979-0



Kirchlengern, Germany. September 29, 2016

Dr.-Ing. Josef G. Groß
Managing Director

EU Declaration of Conformity

In compliance with Appendix IV of the EMC Directive 2014/30/EU

In compliance with Appendix IV of the LVD Directive 2014/35/EU

In compliance with Appendix VI of the EU RoHS Directive 2011/65/EU

The manufacturer:

DewertOkin GmbH

Weststraße 1

32278 Kirchlegern

Germany

declares that the following products

ALPHADRIVE 6 ADZ6 / ALPHADRIVE 6 AD1-6 / ALPHADRIVE 6 AD2-6 with OKIN-Control Unit

meets the requirements of the following EU directives:

Electromagnetic Compatibility Directive 2014/30/EU

Low Voltage Directive 2014/35/EU

RoHS Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

Applied standards:

- EN 60335-1:2012/A11:2014
- EN 55014-1:2006/A2:2011
- EN 55014-2:1997/A2:2008
- EN 61000-3-2:2014
- EN 61000-3-3:2013
- EN 61000-3-3:2008
- EN 62233:2008

This declaration of conformity is no longer valid if constructional changes are made which significantly change this drive (i.e., which influence the technical specifications found in the instructions or the intended use)!



Kirchlegern, Germany. September 29, 2016

Dr.-Ing. Josef G. Groß
Managing Director

Additional information

ALPHADRIVE 6

- UL692
- CSA C22.2 No.68

DewertOkin GmbH
Weststrasse 1
Kirchlengern 32278, Germany
Tel: +49 (0)5223/979-0
Fax.: +49 (0)5223/75182
<http://www.dewertokin.de>
Info@dewertokin.de

ID No.: 84805